

(Comites architecture

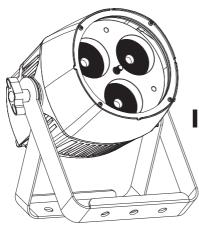

IPZOOM3x15QC

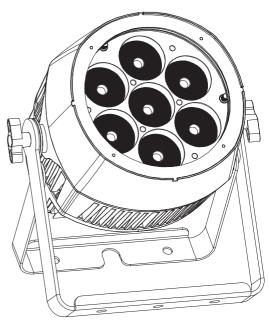

IPZOOM7x15QC

1 - Safety information

Important safety information



This unit is intended for indoor use only. Do not use it in a wet, or extremely cold/hot locations. Failure to follow these safety instructions could result in fire, electric shock, injury, or damage to this product or other property.



Any maintenance procedure must be performed by a CONTEST authorised technical service. Basic cleaning operations must thoroughly follow our safety instructions.



This product contains non-isolated electrical components. Do not undertake any maintenance operation when it is switched on as it may result in electric shock.

Symbols used



This symbol signals an important safety precaution.



The WARNING symbol signals a risk to the user's physical integrity. The product may also be damaged.



The CAUTION symbol signals a risk of product deterioration.

WARNING: This unit contains no user-serviceable parts. Do not open the housing or attempt any maintenance by yourself. In the unlikely even your unit may require service, please contact your nearest dealer





In order to avoid any electrical malfunction, please do not use any multi-socket, power cord extension or connecting system without making sure they are perfectly isolated and present no defect.

Recycling your device



- · As HITMUSIC is really involved in the environmental cause. we only commercialise clean. ROHS compliant products.
- · When this product reaches its end of life, take it to a collection point designated by local authorities. The separate collection and recycling of your product at the time of disposal will help conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment.

Instructions and recommendations

1 - Please read carefully:

We strongly recommend to read carefully and understand the safety instructions before attempting to operate this unit.

2 - Please keep this manual:

We strongly recommend to keep this manual with the unit for future reference.

3 - Operate carefully this product :

We strongly recommend to take into consideration every safety instruction.

4 - Follow the instructions:

Please carefully follow each safety instruction to avoid any physical harm or property damage.

5 - Installation:

We strongly encourage you to only use a fixation system or support recommended by the manufacturer or supplied with this product. Carefully follow the installation instructions and use the adequate tools.

Always ensure this unit is firmly fixed to avoid vibration and slipping while operating as it may result in physical injury.

6 - Ceiling or wall installation:

Please contact your local dealer before attempting any ceiling or wall installation.

7 - Ventilation :

The cooling vents ensure a safe use of this product, and avoid any overheating risk. Do not obstruct or cover these vents as it may result in overheating and potential physical injury or product damage. This product should never been operated in a closed non-ventilated area such as a flight case or a rack, unless cooling vents are provided for the purpose

8 - Heat exposure:

Sustained contact or proximity with warm surfaces may cause overheating and product damages. Please keep this product away from any heat source such as a heaters, amplifiers, hot plates, etc...

10 - Electric power supply:

This product can only be operated according to a very specific voltage. These information are specified on the label located at the rear of the product.

11 - Power cords protection:

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at lugs, convenience receptacles and the point where they exit from the fixture.

12 - Cleaning precautions:

Unplug the product before attempting any cleaning operation. This product should be cleaned only with accessories recommended by the manufacturer. Use a damp cloth to clean the surface. Do not wash this product.

13 - Long periods of non use:

Disconnect the unit's main power during long periods of non use.

14 - Liquids or objects penetration:

Do not let any object penetrate this product as it may result in electric shock or fire. Never spill any liquid on this product as it may infiltrate the electronic components and result in electric shock or fire.

15 - This product should be serviced when:

Please contact the qualified service personnel if:

- The power cord or the plug has been damaged.
- Objects have fallen or liquid has been spilled into the appliance.
- The appliance has been exposed to rain or water.
- The product does not appear to operate normally.
- The product has been damaged.

16 - Inspection/maintenance:

Please do not attempt any inspection or maintenance by yourself. Refer all servicing to qualified personnel.

17 - Operating environment:

Ambient temperature and humidity: +5 - +35°C.

Do not operate this product in a non-ventilated, or warm place.

2 - Technical specifications

Optical

- >LEDs:
 - 3 x 15W RGBW LEDs (10656 IPZ00M3x15QC)
 - 3 x 15W RGBW LEDs (10657 IPZ00M7x15QC)
- > Light output :
 - 625 to 7760 Lux at 3m depending on the angle (10656 -IPZ00M3x15QC)
 - 1250 t o 13800 Lux at 3m depending on the angle (10657 -IPZOOM7x15QC)
- Double lens designed for a perfect beam diffusion
- Motorized zoom angle: 12° to 45°

Functions

- Built-in command panel with drop-down display to:
 - . Select the DMX address
 - Select the number of channels: 2.4.6 or 8
 - · Select colour presets or built-in shows
 - · Select dimmer curves
 - Master/Slave Mode
 - Manual Mode

Connectors

DMX IN and OUT via 3-pin XLR for the IPZ00M3x15QC and 5-pin for the IPZ00M7x15QC - SEETRONIC® plug with sealing cap. POWER IN/OUT via 3-pin SEETRONIC® plugs with sealing cap.


Additional information


- > Power supply: 100-240V/50-60Hz
- > Power consumption:
 - 70 W (10656 IPZ00M3x15QC)
 - 135 W (10657 IPZ00M7x15QC)
- > Cooling system: convection-cooled
- > Finish: die-cast aluminium painted black
- > Pressure compensation valve with waterproof membrane
- Dimensions: 270 x 320 x 320 mm
- Weight:
 - 5.8 kg (10656 IPZ00M3x15QC)
 - 9,9 kg (10657 IPZ00M7x15QC)

Package contents:

The package must contain the following elements:


- The projector
- The user guide
- > One IP65 Seetronic® Power / 2 poles + earth power cord

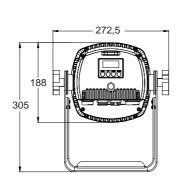


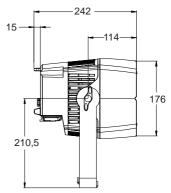


IPZOOM7x150C

IPZ00M3x150C

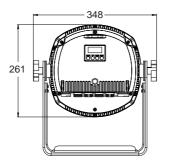

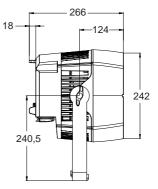

3 - Overview

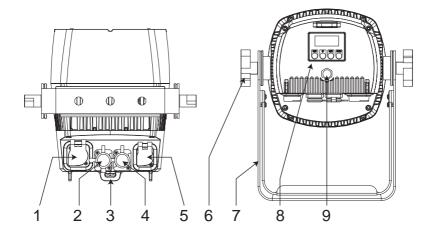

1 | Power input

Allows you to connect your projector to the mains viaSeetronic[©] Power IP/ 2 poles + earth cord. This power cord is supplied with the projector.

Please make sure the voltage of your workplace matches this projector.

2 DMX input

3-pin XLR IP Seetronic[©] XLR input hardwired as follows:

- Pin 1: Mass
- Pin 2: Negative signal
- Pin 3: Positive signal

3 Safety ring

Allows to use a second safety cable. Double safety systems are mandatory for usage in public places.



CAUTION!

Please make sure the tightening wheel is securely fastened.
Using a safety cable is mandatory.

When using this device in public places,

current legislation requires that each devices features a double fixation system to ensure its stability. This system must hold up to 10 times times the weight of the device, meaning you will be required to use a cable able to hold 100 kilos to support your IPZ00M7x15QC or 60 Kilos to support your IPZ00M3x15QC.

4 DMX output

3-pin XLR IP Seetronic[©] XLR input hardwired as follows:

- Pin 1 : Mass
- Pin 2: Negative signal
- Pin 3: Positive signal

5 | Power output

Allows to connect another projector via a Seetronic cable[®] Power IP. This cord is not supplied.

6 Tightening wheel for suspension bracket

Allows to adjust the position of the projector and lock it in this position.

7 Double suspension bracket

Allows you to suspend and adjust the projector.

B Display and menu buttons

Allows you to intuitively configure your device. Please refer to next paragraph for more details about the menu functions. The backlight can be turned off via the Backlight function from the menu.

MODE Button

Allows you to access the menu and select a function.

ENTER Button

Allows you to enter sub-menus and apply changes.

UP and DOWN buttons

Allows you to increase or decrease parameter values.

9 Pressure compensation valve

Temperature changes between periods of activity and inactivity affects the internal pressure of the projector. This valve guarantees the air flows through the projector while blocking water and residues

4 - Internal menu

4.1 - Initialisation

Upon initialisation, the display will indicate:

Update Wait ...

The projector will then check for available updates. It will then initialise, and the display will indicate:

IP ZOOM 3x15QC	ou	IP ZOOM 7x15QC
-------------------	----	-------------------


The projector is ready to be operated once both these steps are completed.

4.2 - Menu tree

Menu	Sub-menu	UP and DOWN	Action
Menu Set ADDR	Set Adress XXX	Sets the DMX address	. Values from 001 to 512.
Menu UserMode	CH: 03/05/07/09	Allows you to determine the number of DMX channels used. DMX modes: - 3-channel mode: Colours and Macros/Dimmer or speed/Zoom - 5-channel mode: Red/Green/Blue/White/Zoom - 7-channel mode: Red/Green/Blue/White/Dimmer/Shutter/Zoom - 9-channel mode: Red/Green/Blue/White/Dimmer/Shutter/Colours and Macros/Speed/Zoom	
	NO DMX Close/Hold	Allows you to determine the behaviour of your projector in case of DMX signal interruption: Close: The projector shuts off. Hold: The projector holds onto the last DMX instruction received.	
	LCD.Set	Backligh XX	Allows you to turn off the backlight when the screen has been inactive. From 1 to 60 seconds.
		Key Lock ON/Off	Allows you to lock menu buttons. Press the MODE button for 3 seconds to unlock them again.
	DisFlash	DisFlash ON/OFF	Activates or diactivates display flashes in case of absence of DMX signal
Menu	LOAD ON/OFF	Resets back to factory settings.	
Function	TEMP	TEMP Celsius	Display the temperature of your projector in Celsius.
		TEMP Fahren	Display the temperature of your projector in Fahrhenheit.
	DimCurve (Dimmer settings)	DimCurve Standard	
		DimCurve Stage	
		DimCurve TV	Rise and fall times are different for each mode. Please refer to chapter 4.3 for more details about dimmer curves.
		DimCurve Architec	- unininici curves.
		DimCurve Theatre	

		TimeInfo Current	Displays the number of hours since the projector was last activated. Resets to 0 when the projector shuts off.
	Info TimeInfo	TimeInfo TotalTim	Displays the number of hours since the first time the projector was activated.
		TimeInfo LastClea	Allows you to visualise the amount of time recorded during last session.
Info		TimeInfo TimerPIN	Allows you to erase the amount of time during the last session. Password is 050.
Menu	Info TempInfo	TempInfo XXX°	Displays the internal temperature of your projector.
	Info ModelInf	IP ZOOM Xx15QC	Displays the name of the unit.
	Info Software	1U V101C 2U V101C	Displays the current software version. May differ from this manual.
	Info ErrorInf	Error.Info Focus	Display error messages.
ZoomRset	ZoomRset Reset.M	ZOOM Reset	Re-initialise zoom motors.
Menu	ZoomRset Calibrat	Password XXX	Allows you to calibrate the initial position of the zoom. Values from 000 to 255.
Slave Menu	Slave	Activates slave mode.	
Dimmer Menu	Dimmer XXX	Allows you to adjust th	ne dimmer.
Manual Menu	Manual 200M Strobe Red Green Blue White	Allows you to manually adjust each parameter of y projector. Values from 000 to 255.	
	PlayUser Time	Time 00 – 99	Sets the user programs duration.
	PlayUser Fade	Fade 00 - 99	Sets the fading time between each user program.
PlayUser Menu	PlayUser Flash	Flash 00 - 99	Configures the strobe intensity during user programs.
	PlayUser Dimmer	Dimmer 000 – 255	Configures the general output of the current user program.
	PlayUser PlasStop	PlasStop Play – Stop	Plays or stops the user program.
	EditUser Step NB	Step NB 01 - 20	Configures the number of steps included in the user program (max. 20 steps).
EditUser Menu	EditUser Step	Step 01 - 20	Allows you to select a step to modify or create.
	EditUser Red/Green/Blue/ White	Red 000 - 255	Allows you to adjust each colour level for each step selected via EditUser Step.

4.3 Dimmer modes

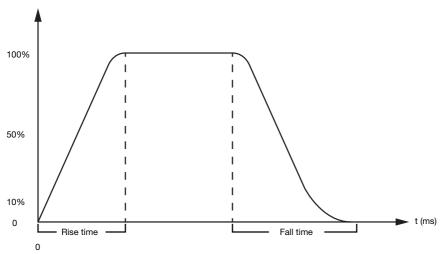

	From 0 to 255 with fade time of 0 second		From 0 to 255 with fade time of 1 second	
Dimmer modes	Rise time in millisecond	Fall time in millisecond	Rise time in millisecond	Fall time in millisecond
Standard	0	0	0	0
Scene	780	1100	1540	1660
Television	1180	1520	1660	1940
Architectural	1380	1730	2040	2120
Theater	1580	1940	2230	2280

5 - DMX modes

The projector enters DMX mode as soon as an incoming DMX signal has been detected.

5.1 - 1-channel mode

Channel	Values	Action
	Colour and macros	
	000 - 007	LED off
	008 - 015	Red
	016 - 023	Orange
	024 - 031	Yellow
	032 - 039	Green
	040 - 047	Cyan
	048 - 055	Blue
	056 - 063	Pink
	064 - 071	Magenta
	072 - 079	Cold White
	080 - 087	Warm White
	088 - 095	Full power
	096 - 103	Pastel Pink
	104 - 111	Pastel Apricot
	112 - 119	Very pastel Ocer
1	120 - 127	Green/Pastel Yellow
	128 - 135	Pearl/Pastel Green
	136 - 143	Pearl/Pastel Grey
	144 - 151	Pastel pearl
	152 - 159	Pearl/Pastel Blue
	160 - 167	Pastel Veronese Green
	168 - 175	Very pastel Lagoon
	176 - 183	Pastel Sky Blue
	184 - 191	Sky Blue
	192 - 199	Pastel Blue
	200 - 207	Macro 1
	208 - 215	Macro 2
	216 - 223	Macro 3
	224 - 231	Macro 4
	232 - 239	Macro 5
	240 - 247	Macro 6
	248 - 255	Macro 7
	Dimmer or speed	,
2	000 - 255	Dimmer from 0 to 100% if channel 1 set between 008 and 199
	000 - 255	Increasing speed if channel 1 set between 200 and 255
3	Zoom	,
	000 - 255	Zoom from 10° to 45°

5.2 - 5-channel mode

Channel	Values	Action
4	Red	
	000 - 255	000 : black out - 255 : 100%
2	Green	
	000 - 255	000 : black out - 255 : 100%
3	Blue	
ა	000 - 255	000 : black out - 255 : 100%
4	White	
4	000 - 255	000 : black out - 255 : 100%
5	Zoom	
) 3	000 - 255	Zoom from 10° to 45°

5.3 - 7-channel mode

Channel	Values	Action
1	Red	
'	000 - 255	000 : black out - 255 : 100%
2	Green	
	000 - 255	000 : black out - 255 : 100%
3	Blue	
3	000 - 255	000 : black out - 255 : 100%
4	White	
4	000 - 255	000 : black out - 255 : 100%
5	Dimmer	
3	000 - 255	Adjustable output from 0 - 100%
	Strobe	
	000 - 031	LED off
	032 - 063	LED on
		Strobe effect at increasing speed
6	096 - 127	LED on
	128 - 159	Pulse effects sequence
	160 - 191	LED on
	192 - 223	Random strobe effect at increasing speed
	223 - 255	LED on
7	Zoom	
7	000 - 255	Zoom from 10° - 45°

5.4 - 9-channel mode

Channel	Values	Action
	Red	
	000 - 255	000 : black out - 255 : 100%
2	Green	
	000 - 255	000 : black out - 255 : 100%
,	Blue	
3	000 - 255	000 : black out - 255 : 100%
4	White	
	000 - 255	000 : black out - 255 : 100%

5.4 - 9-channel mode (next and last part)

_	Dimmer	
5	000 - 255	Adjustable output from 0 to 100%
Channel	Values	Action
	Strobe	
	000 - 031	LED off
	032 - 063	LED on
	064 - 095	Strobe effect at increasing speed
6	096 - 127	LED on
	128 - 159	Pulse effects sequence
	160 - 191	LED on
	192 - 223	Random strobe effect at increasing speed
	223 - 255	LED on
	Colour and macros	
	000 - 007	LED off
	008 - 015	Red
	016 - 023	Orange
	024 - 031	Yellow
	032 - 039	Green
	040 - 047	Cyan
	048 - 055	Blue
	056 - 063	Pink
	064 - 071	Magenta
	072 - 079	Cold White
	080 - 087	Warm White
	088 - 095	Full power
	096 - 103	Pastel Pink
	104 - 111	Pastel Apricot
	112 - 119	Very pastel Ocer
7	120 - 127	Green/Pastel Yellow
	128 - 135	Pearl/Pastel Green
	136 - 143	Pearl/Pastel Grey
	144 - 151	Pastel pearl
	152 - 159	Pearl/Pastel Blue
	160 - 167	Pastel Veronese Green
	168 - 175	Very pastel Lagoon
	176 - 183	Pastel Sky Blue
	184 - 191	Sky Blue
	192 - 199	Pastel Blue
	200 - 207	Macro 1
	208 - 215	Macro 2
	216 - 223	Macro 3
	224 - 231	Macro 4
	232 - 239	Macro 5
	240 - 247	Macro 6
	248 - 255	Macro 7
8	Macros speed	
0	000 - 255	Increasing speed
9	Zoom	
<u> </u>	000 - 255	Zoom fro 10° to 45°
		

6 - Macros composition

	Macros composition
Macro 1	Sequence: Red, Orange, Yellow, Green, Cyan, Blue, Pink, Magenta, Cold White, Warm White: step-mode
Macro 2	Sequence: Red, Vert, Blue, White + Pastel colours: step-mode
Macro 3	Red to Yellow crossfade
Macro 4	Red to Blue crossfade then Full power then Yellow then Blue then Pearl then Magenta then Cyan
Macro 5	Blue to Cyan crossfade
Macro 6	Blue to Red crossfade
Macro 7	Fondu de Blanc froid vers Blanc chaud

